INDUSTRIAL TRIMMASTER® Xtreme Stand™ Setup

Installation is easiest if you place your Mark IV Brake on its back before installing legs. Once installed, right your brake to its normal operating position (See images below)



Set brake on back with rear of brake resting on the ground.



Unfold Extreme stand.



Insert back ends of top of extreme stand into rear brackets and secure with fast pins.




Pivot front ends of top of extreme stand into front brackets and secure with fast pins.




Use two people to lift brake and set up in normal operating position and pivot walk board at front of stand into flat position.



From the rear of the brake, remove fast pins from rear struts on base rails of brake and lower struts to meet rear legs of extreme stand. Insert fast pins to secure struts in place.

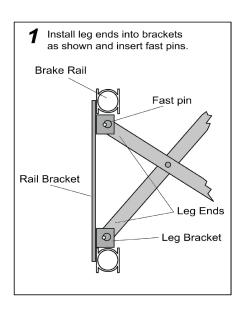

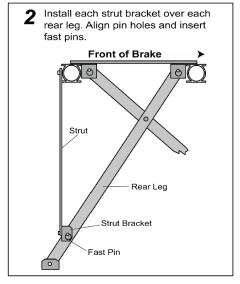

Best Practices!

Check all Fast pins, nuts, and bolts for proper connection before each use.

Familiarize yourself with the position of the legs and platform.

Always stand firmly on the foot board while making bends.

It is recommended that two people are used to set up and move the brake.

